


## THE LEAN LEDGE (1000MM) - INSTALLATION

Material: Aluminium  
Finish: Powder-coat  
Rust proof / water resistant  
Holds 8kg when fixed with supplied wall anchors


3 x powder-coated screws included  
3 x plastic wall anchors included

Designed & manufactured in **New Zealand**



- 1 It's time for installation!  
Let's get started.

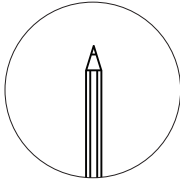

Position 'The Lean Ledge' in place so that it is lined up on the wall nice and straight. Mark out where the screw holes are positioned with a pencil (we recommend lining the screw holes up with wall studs where possible). Once the center of each hole is marked out, take the 'Lean Ledge' off the wall and place it in a safe place.



- 2 Now let's drill some pilot holes over the marked-out hole locations. A 4mm drill bit will do the job when screwing straight into a wall stud. If using the plastic anchor supplied, drill a 6-7mm hole. When installing the anchors, you may need to lightly tap them in with a hammer. We recommend using plastic anchors when positioned over plasterboard. Concrete walls will require their own screw anchor specifically designed for concrete.

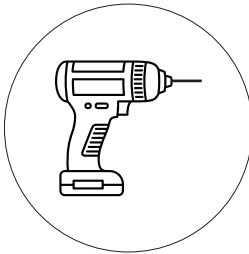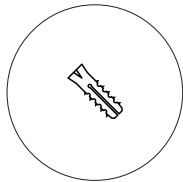

- 3 Once the anchors are installed, grab 'The Lean Ledge' and line it up over the holes. Install the screws provided with a screwdriver on a low-speed setting (make sure the screws are going in straight). Be careful not to scratch the powder coat when installing. If your drill doesn't have a low-speed setting, try installing with a manual screwdriver.

