
WIGGLE WALL HANGER (6 HOOK) - INSTALLATION

Material: Aluminium Finish: Powder-coat Rust proof / water resistant Holds 5kg when fixed with supplied wall anchors

2 x powder-coated screws included 2 x plastic wall anchors included

Designed & manufactured in New Zealand

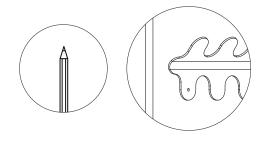


1 It's time for installation! Let's get started.


> Position the 'Wiggle Wall Hanger' in place so that it is lined up on the wall nice and straight. Mark out where the screw holes are positioned with a pencil (we recommend lining the screw holes up with wall studs where possible). Once the center of each hole is marked out, take the Wiggle Wall Hanger off the wall and place it in a safe place.





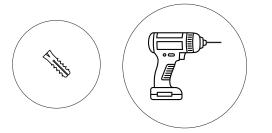


2 Now let's drill some pilot holes over the marked-out hole locations. A 4mm drill bit will do the job when screwing straight into a wall stud. If using the plastic anchor supplied, drill a 6-7mm hole. When installing the anchors, you may need to lightly tap them in with a hammer. We recommend using the plastic anchors supplied when positioned over plasterboard. Concrete walls will require their own screw anchor specifically designed for concrete.

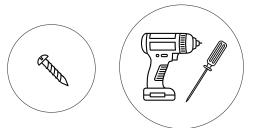



3 Once the anchors are installed, grab the 'Wiggle Wall Hanger' and line it up over the holes. Install the screws provided with a screwdriver on a low-speed setting (make sure the screws are going in straight). Be careful not to scratch the powder coat when installing. If your drill doesn't have a low-speed setting, try installing with a hand screwdriver.

You're all set! Now take off that jacket and let the 'Wiggle Wall Hanger' hold that for you.



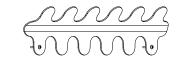

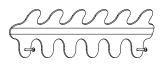


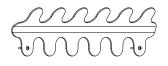

Material: Aluminium Finish: Powder-coat Rust proof / water resistant Holds 7kg when fixed with supplied wall anchors


> 3 x powder-coated screws included 3 x plastic wall anchors included


Designed & manufactured in New Zealand

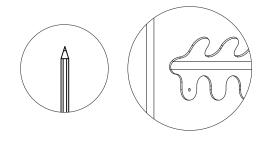


1 It's time for installation! Let's get started.

> Position the 'Wiggle Wall Hanger' in place so that it is lined up on the wall nice and straight. Mark out where the screw holes are positioned with a pencil (we recommend lining the screw holes up with wall studs where possible). Once the center of each hole is marked out, take the Wiggle Wall Hanger off the wall and place it in a safe place.



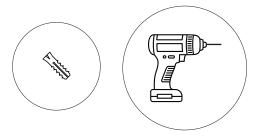



2 Now let's drill some pilot holes over the marked-out hole locations. A 4mm drill bit will do the job when screwing straight into a wall stud. If using the plastic anchor supplied, drill a 6-7mm hole. When installing the anchors, you may need to lightly tap them in with a hammer. We recommend using the plastic anchors supplied when positioned over plasterboard. Concrete walls will require their own screw anchor specifically designed for concrete.

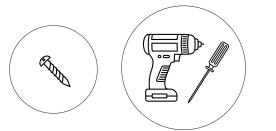

3 Once the anchors are installed, grab the 'Wiggle Wall Hanger' and line it up over the holes. Install the screws provided with a screwdriver on a low-speed setting (make sure the screws are going in straight). Be careful not to scratch the powder coat when installing. If your drill doesn't have a low-speed setting, try installing with a hand screwdriver.

You're all set! Now take off that jacket and let the 'Wiggle Wall Hanger' hold that for you.






WIGGLE WALL HANGER (21 HOOK) - INSTALLATION

Material: Aluminium Finish: Powder-coat Rust proof / water resistant Holds 9kg when fixed with supplied wall anchors

> 5 x powder-coated screws included 5 x plastic wall anchors included


Designed & manufactured in New Zealand

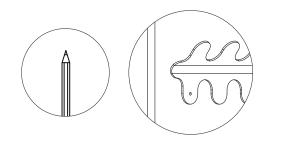


 It's time for installation! Note that this is a two-person job. Let's get started.

> Position the 'Wiggle Wall Hanger' in place so that it is lined up on the wall nice and straight. Mark out where the screw holes are positioned with a pencil (we recommend lining the screw holes up with wall studs where possible). Once the center of each hole is marked out, take the Wiggle Wall Hanger off the wall and place it in a safe place.



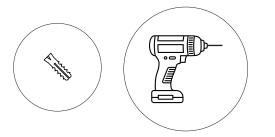

2 Now let's drill some pilot holes over the marked-out hole locations. A 4mm drill bit will do the job when screwing straight into a wall stud. If using the plastic anchor supplied, drill a 6-7mm hole. When installing the anchors, you may need to lightly tap them in with a hammer. We recommend using the plastic anchors supplied when positioned over plasterboard. Concrete walls will require their own screw anchor specifically designed for concrete.

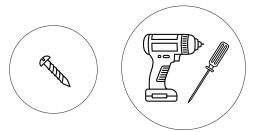

3 Once the anchors are installed, grab the 'Wiggle Wall Hanger' and line it up over the holes. Install the screws provided with a screwdriver on a low-speed setting (make sure the screws are going in straight). Be careful not to scratch the powder coat when installing. If your drill doesn't have a low-speed setting, try installing with a hand screwdriver.

You're all set! Now take off that jacket and let the 'Wiggle Wall Hanger' hold that for you.



